


OPERATING INSTRUCTIONS

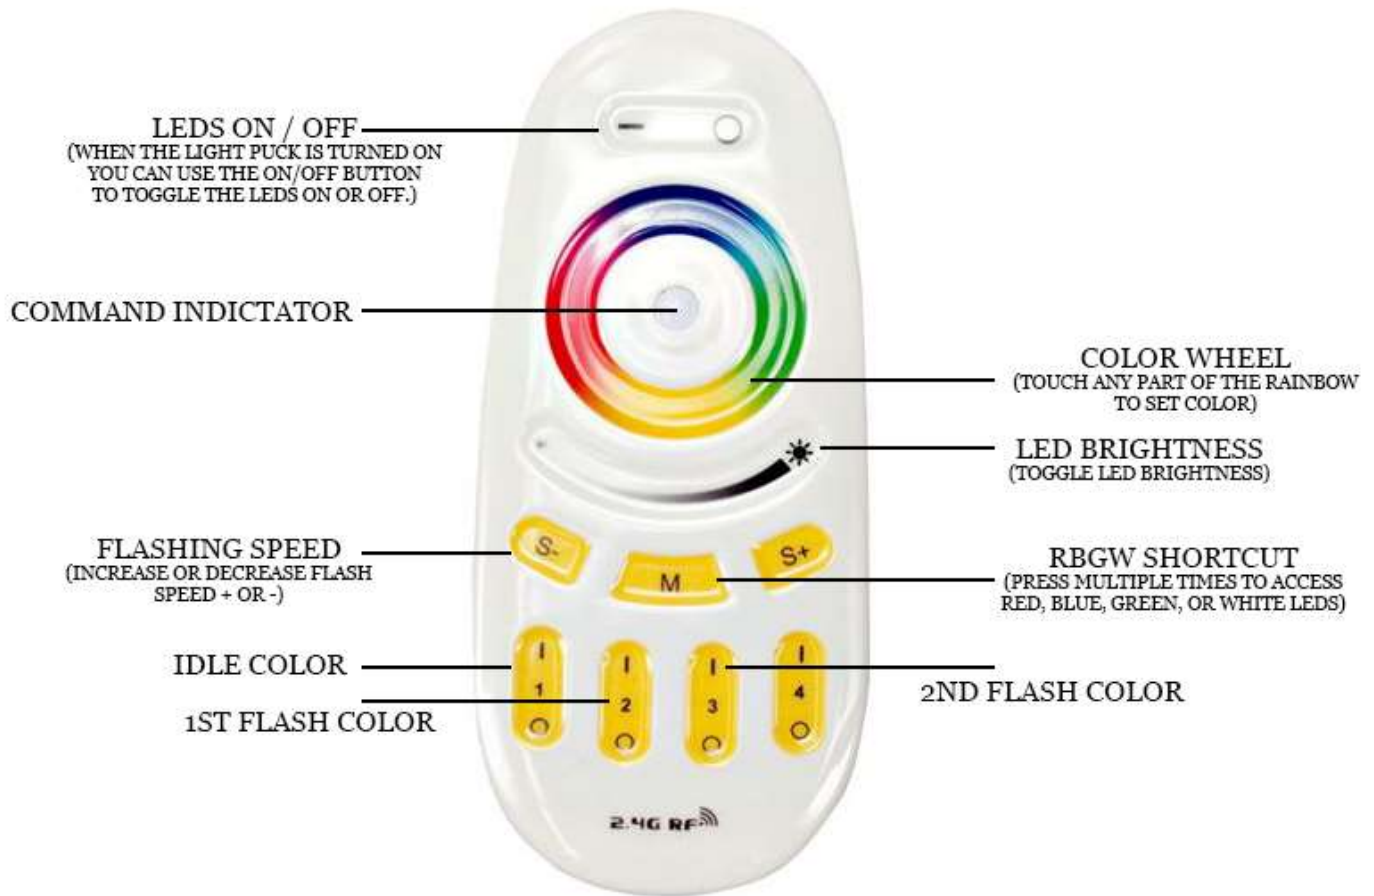

HOW TO USE:

1. TURN ON THE LIGHT PUCK, PROGRAMMING NEEDS TO BE COMPLETED WITH 2 MINUTES, OTHERWISE THE PREVIOUS PROGRAM IS USED.
2. DURING PROGRAMMING MODE, THE LIGHTS ON THE LIGHT PUCK SHOULD BE FLASHING.
3. TOUCH THE #1 BUTTON TO SET THE IDLE COLOR. DEPENDING ON WHAT THE IDLE COLOR IS SET AT, THE FLASHING COLOR MAY OR MAY NOT CHANGE. SET THE IDLE COLOR USING EITHER THE COLOR WHEEL OR THE RBGW SHORTCUT.
4. REPEAT STEP 3 FOR BUTTONS 2 & 3.
5. ONCE FINISHED, TAP THE TOP OF THE UNIT TO SET THE PROGRAM. THE LIGHTS SHOULD STAY SOLID WHEN PROGRAMMING IS ACCEPTED
6. WHEN POWERED ON THE BASE WILL ALWAYS DEFAULT TO THE PREVIOUS PROGRAM, IF NO REMOTE COMMANDS ARE RECEIVED WHEN 2 MINUTES

TROUBLESHOOTING

COMMAND NOT ACCEPTED: CHECK REMOTE BATTERIES.
IS REMOTE INDICATOR LIGHT TURNING ON? PRESS BUTTON FIRMLY

PROGRAMMING NOT ACCEPTED: ADJUST THE MICROPHONE SENSITIVITY. ON THE LIGHT PUCK, TURN THE BIG DIAL ONE NOTCH CLOCKWISE. THEN, DROP A GOLF BALL NEXT TO UNIT. KEEP TURNING THE DIAL ONE NOTCH UNTIL THE LEDS FLASH. THEN, TURN THE LIGHT PUCK OFF AND BACK ON TO ENTER THE PROGRAMMING MODE.

LIGHT PUCK CARE INSTRUCTIONS

- AVOID STORING IN HUMID / WET CONDITIONS.

TARGET INFLATION / CARE INSTRUCTIONS

- FOR RAPID INFLATION, USE A LEAF BLOWER

- DO NOT OVER INFLATE
- AVOID USING FOR PROLONGED PERIODS OF TIME IN EXTREME COLD OR HEAT